


Installation Manual for DJI Neo Stealth propellers

Install the marked propellers on the corresponding marked motors.

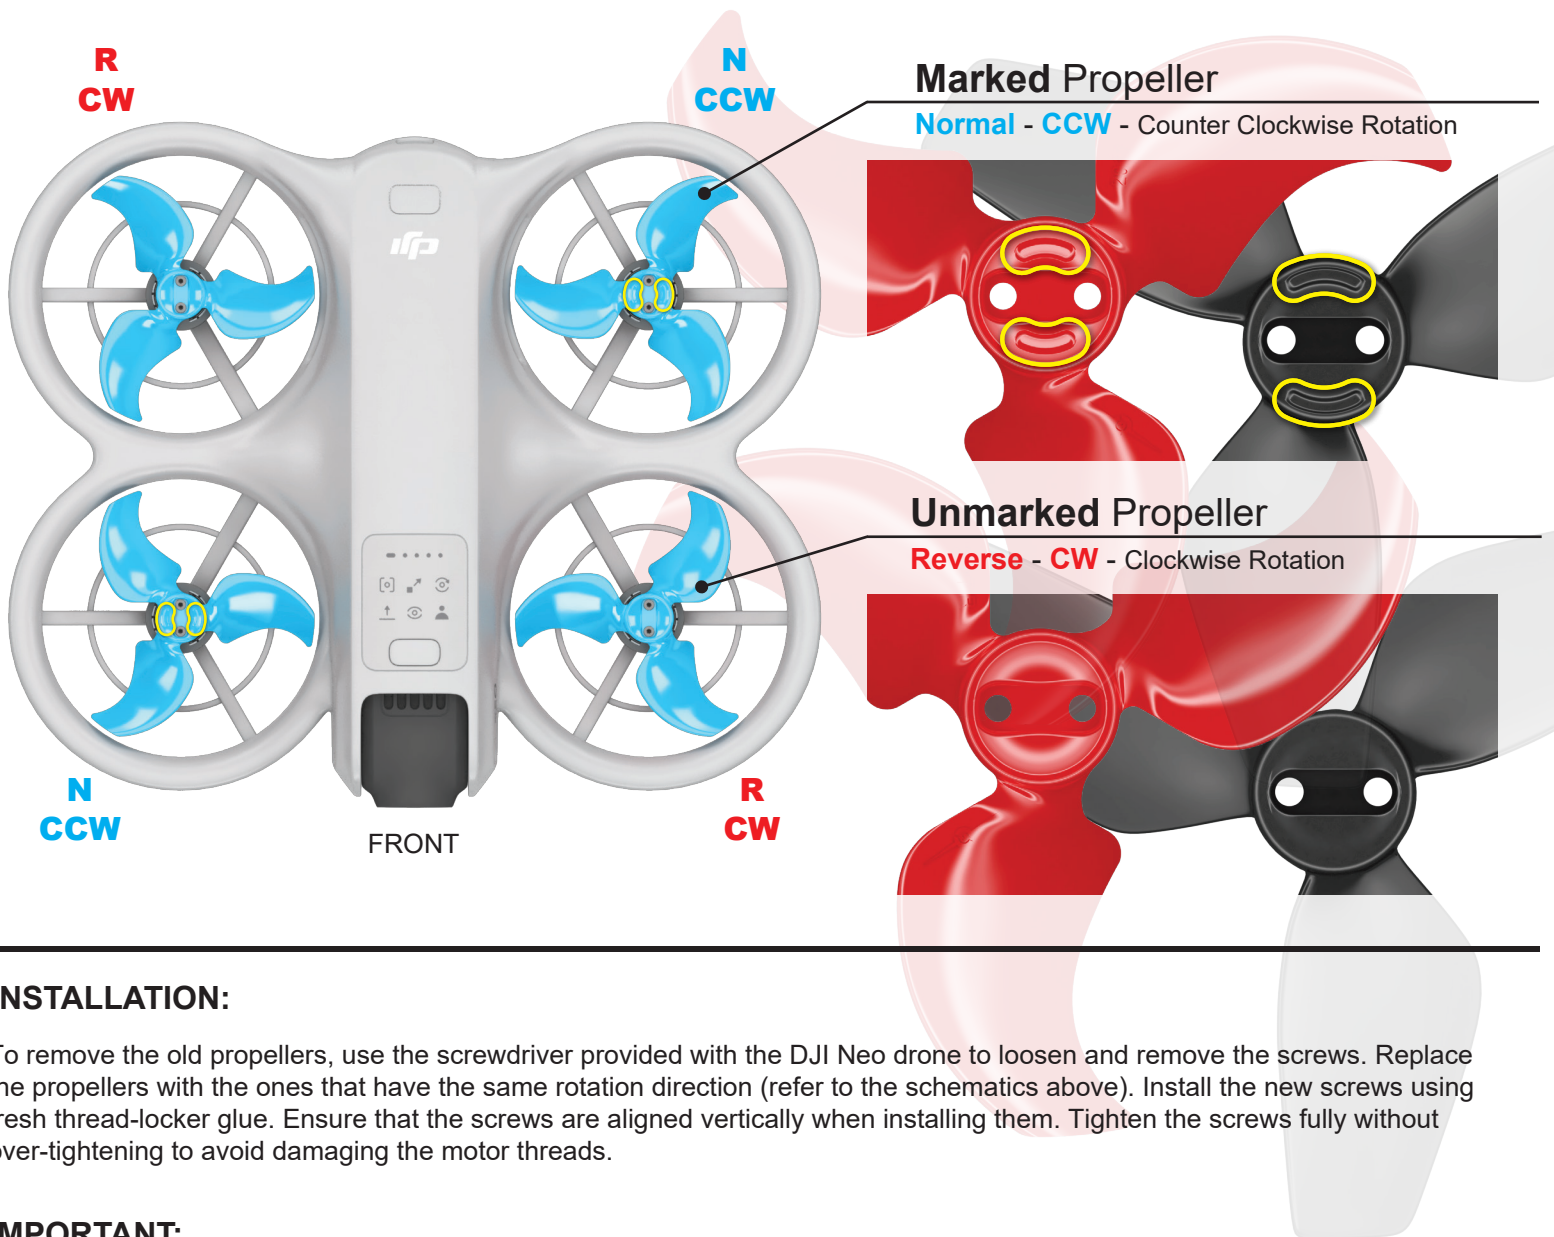

INSTALLATION:

To remove the old propellers, use the screwdriver provided with the DJI Neo drone to loosen and remove the screws. Replace the propellers with the ones that have the same rotation direction (refer to the schematics above). Install the new screws using fresh thread-locker glue. Ensure that the screws are aligned vertically when installing them. Tighten the screws fully without over-tightening to avoid damaging the motor threads.

IMPORTANT:

- ⚠ **Follow Manufacturer Guidelines:** Always adhere to the installation instructions provided by the drone manufacturer.
- ⚠ **Verify Propeller Direction:** Ensure that the propeller rotation direction is correct. Incorrect placement can cause the drone to flip or fail to lift, leading to potential damage.
- ⚠ **Use Undamaged Propellers:** Always replace damaged propellers immediately and use new, undamaged replacements.
- ⚠ **Use Screws with Fresh Thread-locker Glue:** Each time you change propellers, replace the screws with new ones and use fresh thread-locker glue to prevent loosening during operation.
- ⚠ **Check Installation and Tightness:** Ensure that the propellers and motors are securely installed before each flight.
- ⚠ **Check screw tightness after every 30 hours of flight.**
- ⚠ **Handle with Care:** Propeller blades are sharp. Always refer to the schematics above for guidance.



MASTER AIRSCREW®